

Quick Guide

BTP Tag Scanning



Benefits

- Avoids incidents due to loss of other loggers such as USB or RTL
- Updates location on each scan
- Complete temperature monitoring throughout the entire logistics and transportation process
- Asegura la descarga de reportes por parte del cliente final

Records location and temperature in transit

Scan and update by bringing an NFC-enabled cell phone close to you



1

2

3


First Steps

- Turn on the NFC of your cell phone
*If you do not know click on the following link:
How do I know if my cell phone has NFC?

IMPORTANT

2

Enable your phone's location permissions

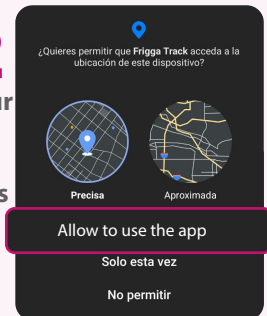

3

Download the Application available for Android and IOS platforms.


[Click here to download the App](#)

4

Update Location and Temperatures

A few Tips


- Remove your phone case or protector to facilitate scanning.
- Slowly move your phone from the bottom to the top while scanning until a connection with the Tag
- If you have further questions you can download the full guide *
- You can change the language of your choice in the upper left corner.

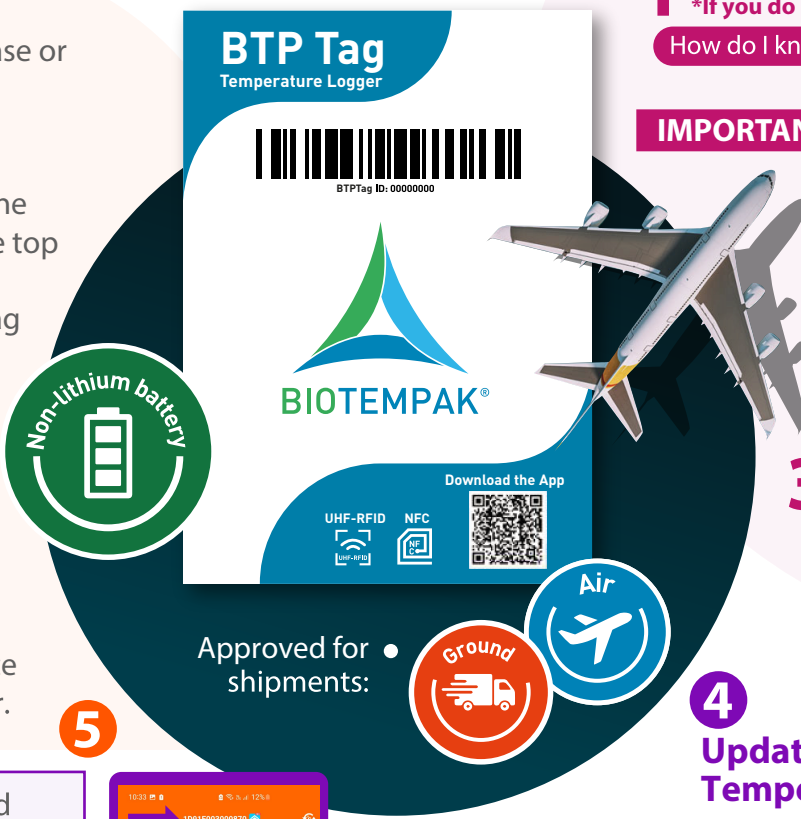

5

Once the tag is scanned we will have the complete temperature record until the cargo is received at the destination airport.


For our part, we will be sharing in the pre-alert emails in which pallet the Tag is located.

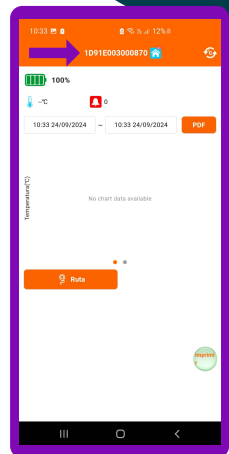

4 A screen with the BTP Tag ID will confirm that the scan was successful.



3 A short loading screen will guide you to complete the scan.

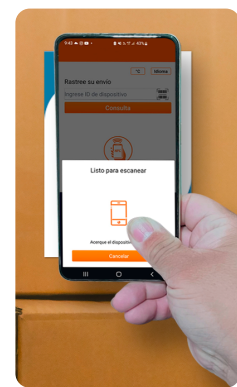

2 Bring the cell phone close to the BTP Tag to update



1 Open the App and tap the NFC symbol

[Click here](#) * To download the complete guide

Contact Biotempak Support

+ 52 449 251 5123 ext: 114
<https://biotempak.com/soporte>